

INSTALLATION INSTRUCTIONS

SIDE BAR PART #81593.12/81590.12

04-06 Dodge Durango

QTY	DESCRIPTION
1	Side Step, left side
1	Side Step, right side
1	Hardware kit

Step One: Locate hardware kit. Check contents with the hardware listed below.

QTY	DESCRIPTION
2	Front Mounting Bracket
1	Rear Mounting Bracket-left
1	Rear Mounting Bracket-right
4	1/2" x 2" Hex Bolt-zinc plated
4	1/2" Lock washer-zinc plated
4	1/2" Flat washer-zinc plated
4	3" plastic rings

Step Two: Remove the front and rear body mount bolts.

Step Three: Locate the two short mounting brackets and loosely install them to the front body mount locations with the factory bolts as per Fig. 1

Step Four: Orient the rear mounting brackets as per Fig. 2 for the rear body mounts and attach with the factory bolts.

Step Five: Place the side bars into position. Using the 1/2" x 2" bolts, 3" plastic rings, and 1/2" lock and flat washers, loosely attach the side bars to the brackets

Step Six: After checking to make sure the side bars are level and parallel with the sides of the vehicle completely tighten all hardware.

Step Seven: Periodically check and retighten the hardware as necessary.



FIG. 1

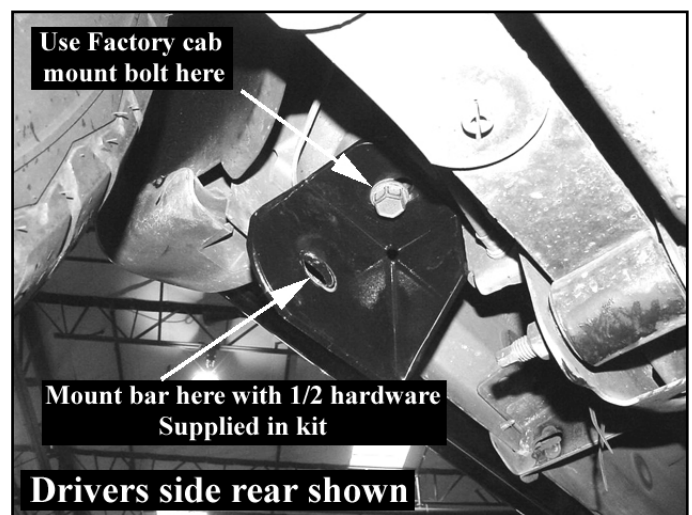


FIG. 2