


## Dodge Ram All Terrain Flare Kit

### CONTENTS:

1. Fender Flares (4)
2. M8 Socket Head Cap Crews (40)
3. M8 Flat Washers (40)
4. M8 Locking Hex Nuts (40)
5. U - Clamps (6)
6. Plastic Square Tabs (6)
7. Phillips Head Screws (6)
8. Large Screws (4)
9. Small Clips (4)



1. Install the supplied trim hardware onto the flares. Place a washer on the bolt and insert the bolt through the hole in the flare. Place a lock nut on the back side of the flare to secure the bolt.

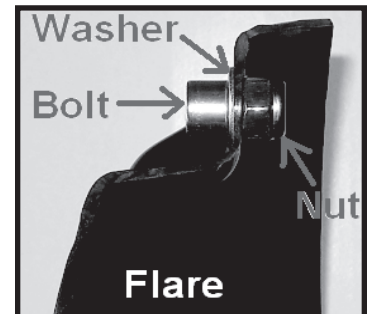

2. Clean inside mounting lip edge with rubbing alcohol. Install edge trim as shown by removing red vinyl tape covering only a few inches at a time. Do not stretch the trim while being applied, this may cause shrinkage after installation. Trim excess off.



3. Remove factory screws located in wheel well housing as indicated in the image. Install the flare using the factory screws removed. When installing the flare moderate pressure against the outside of the flare pushing towards the vehicle will be needed for installation. Repeat this procedure for the other front flare.




4. Remove the two factory screws located in the rear section of the rear wheel well. Place the fender flare in place and with a marking pen, mark the top three mounting holes in the fender well area using the mounting holes in the flare as a guide. Place two small clips over the 2 factory holes in the front of the wheel well.



## Chevy Silverado All Terrain Flare Kit

5. Install the plastic tabs centered over the markings in step 4. Install the u-clamps over the inner lip of the fender centered over the tab. Install the flare using the supplied screws. Moderate pressure against the flare may be needed for mounting holes to align.

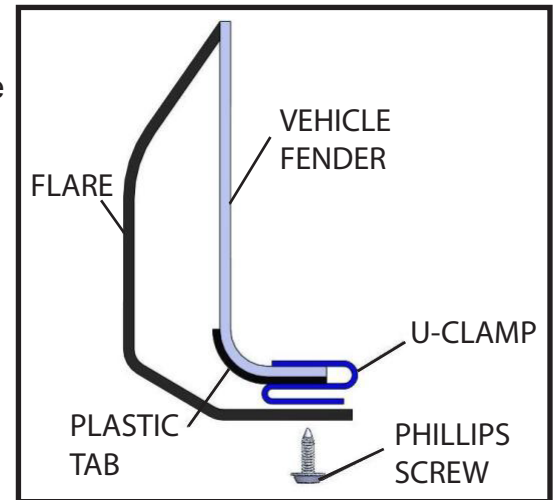

## Optional Painting Instructions

NOTICE: Do not use any harsh chemicals on flares. Use only plastic approved cleaning chemicals.

### Paint Preparation:

1. Lightly sand flares with 320 grid sandpaper.
2. Remove all surface contaminants from flares using an approved grease and wax remover.
3. Wipe flares with a tack rag to remove any dust or dirt.



### Painting:

1. Apply two even coats of adhesion promoter to flares. Allow recommended flash time between coats. Let second coat dry for 15 minutes before primer application.
2. Apply an even coat of primer to flare surface. (A high build primer is recommended)
3. Paint flares with a automotive grade paint. (A flex additive must be added to paint)

