



10-up Dodge Ram

FRONT AIR DEFLECTOR



(A1) Acrylic/Chrome Air Deflector



(A2) Fasteners x 4



(A3) Bumper (Acrylic) x 5



(A4) Bumper (Chrome) x 4



(A5) Alcohol Wipes x 1

A KIT CONTENTS



Phillips Screwdriver



Washbucket

B TOOLS REQUIRED



97°F
35°C
68°F
20°C



APPLICATION:

IMPORTANT NOTICE


Prior to installation, check the entire kit for possible damage or defects.

**IF PARTS ARE DAMAGED OR CONTAIN DEFECTS DO NOT INSTALL.
YOU MUST RETURN THE COMPLETE KIT IF YOU WISH TO MAKE A WARRANTY CLAIM.**




10-up Dodge Ram


FRONT AIR DEFLECTOR

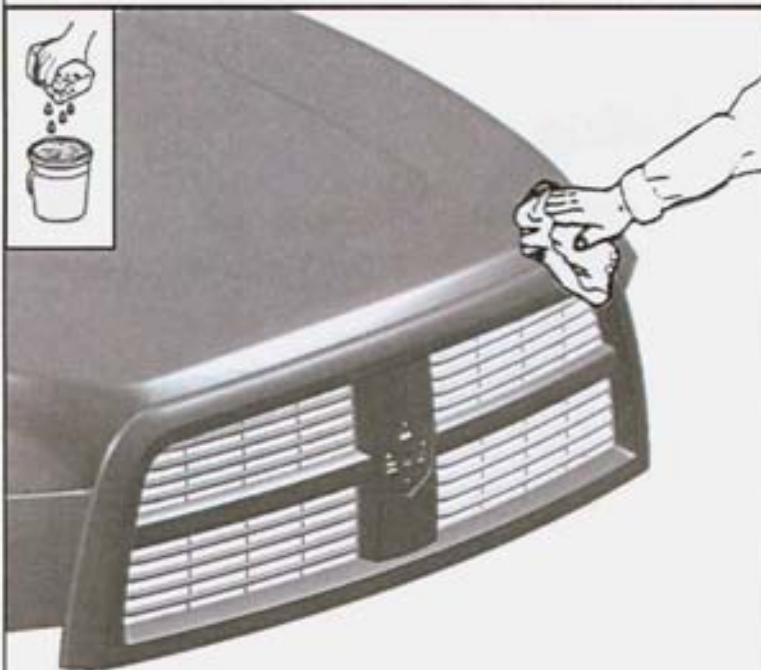

1

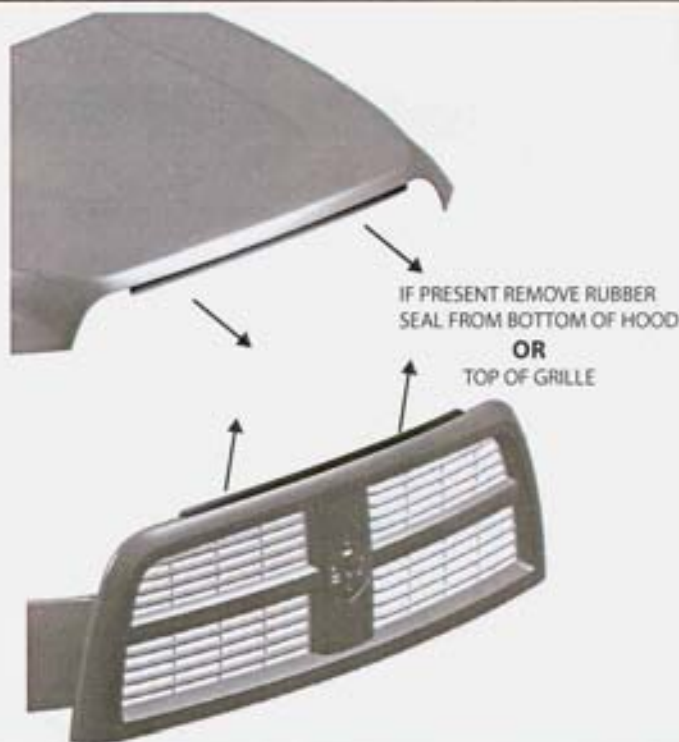


2

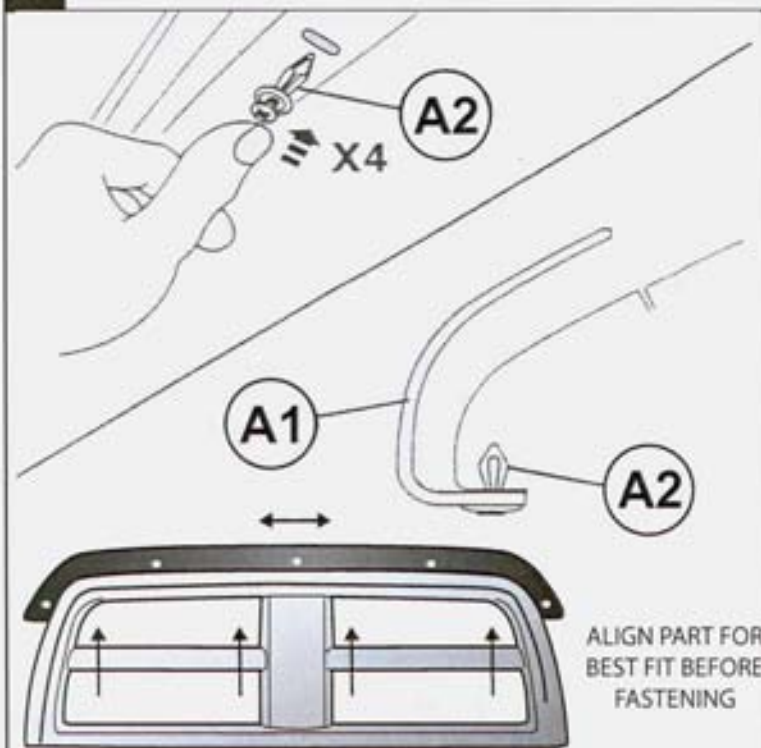

3

INSERT FASTENER AND TIGHTEN SCREW UNTIL FLUSH WITH FASTENER HEAD

CLEAN BACK OF AIR DEFLECTOR SURFACE AFTER THE STICKERS ARE REMOVED WITH THE ALCOHOL PAD OR A CLEAN CLOTH USING ISOPROPYL ALCOHOL; 70% MINIMUM. PLACE BUMPERS AFTER ALCOHOL HAS COMPLETELY EVAPORATED

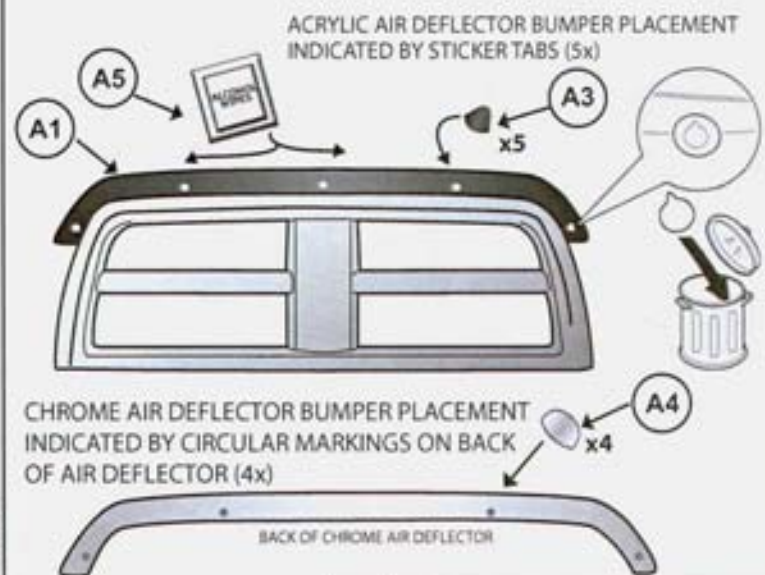

4

ADJUST BUMPERS TO BEST LOCATION